


Assembly Instructions




Step 1

Carefully remove all components from packing and separate. Take inventory (refer to owner's manual) to verify that all components ordered are accounted for. You are now ready to assemble.

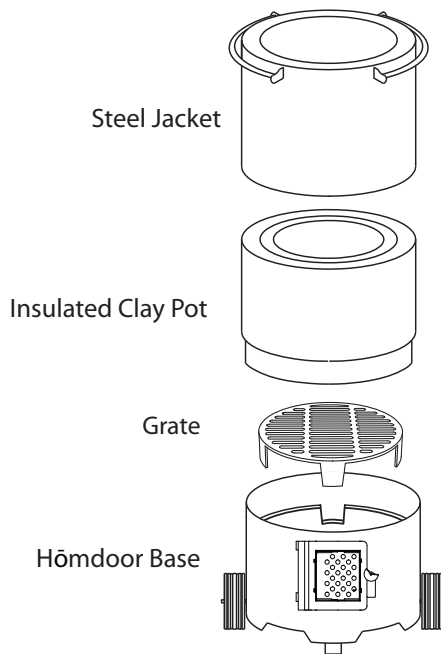


Step 2

Place grate on the base allowing the legs to fall into the slots. Then carefully lower the insulated clay pot onto the Hömdoor base.

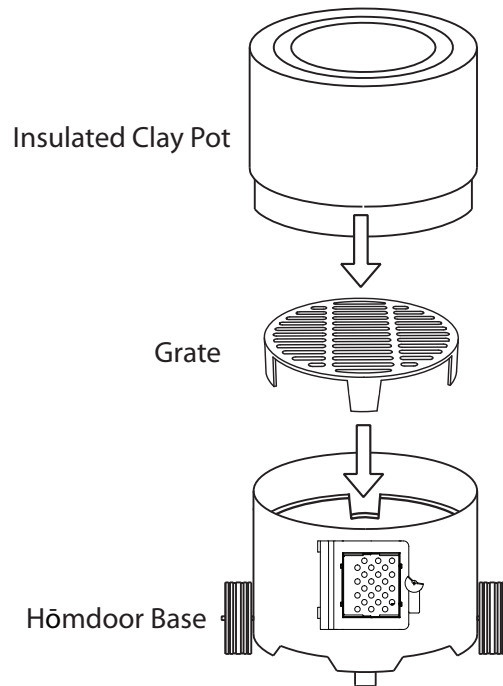

Step 3

Once the clay pot is set in place, gently slide steel jacket over clay pot, precisely aligning the four slots in the jacket with the four screws in the Hömdoor base. With jacket in place, carefully give a turn to lock it. Add supplied screw to the bottom of the jacket. Tighten screws around the jacket.

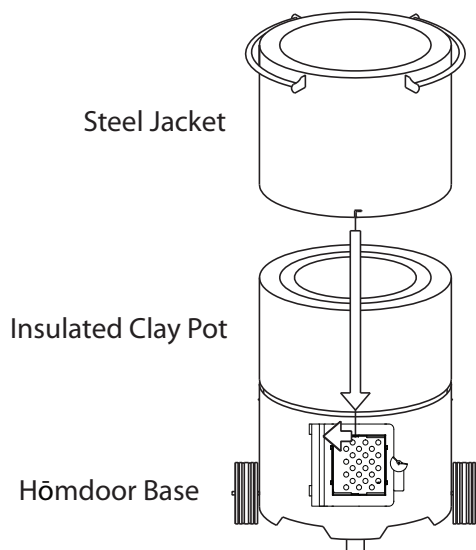

Step 4 - FOR PROPANE AND GAS ONLY

Open the door in the base. Locate the bolt attached to the bottom of the Hömdoor. Remove the nut from the bolt. Place burner connection point over the bolt and hand tighten the nut back onto the bolt. Verify that burner is held in place.

